


BOX 2/4 BOX 2/4 IP66

Control Unit for SAFETY UPGRADING TYPE 4 - SIL 3 SILCL 3 PL e



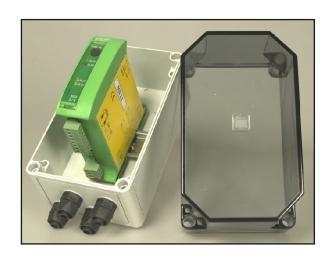



BOX 2/4 and BOX 2/4 IP66 control unit together with the Safety Light Curtains TYPE 3 (model LC3) upgrades the category to TYPE 4.

The control unit receive at its inputs the light curtain final switches, which controls their disparity and supplies in its output the two closed contacts in state of alert, coming from the two safety relays at guided contacts in redundancy selfcontrolled

Moreover the control unit provides these functions:

- External Device Monitoring (EDM): control of the external devices: for example contactor, relay, etc...
- Led Diagnostic for failures signalling and detection
- Contact AUX (Ausiliary) closed with light curtain in alarm state

TECHNICAL FEATURES

Power Supply	24Vdc ± 10%			
Absorption	60 mA			
Type 3 Inputs	2 NO (switches SW1 - SW2) contacts with light curtain in alarm state			
Type 4 Outputs	2 NO (switches SW3 - SW4) contacts with light curtain in alarm state			
Outputs Current	5A @ 250Vac			
Outputs Protection	fuses 5A			
Contact AUX	1 NC - 3 A max (no safety)			
Response Time	15 milliseconds			
Housing	BOX 2/4 = Blend PC/ABS self-autoextinguishing DIN RAIL (EN60715) BOX 2/4 IP66 = Polycarbonate reinforced with glass fiber - transparent lid (EN60529)			
Mechanical Dimensions	BOX 2/4 = 101 x 119 x 35 mm / BOX 2/4 IP66 = 110 x 180 x 165 mm			
Protection Degree	BOX 2/4 = IP20 / BOX 2/4 IP66 = IP66			
Working Temperature	0 / +55 °C			
PFHd	10^{-8} until to $< 10^{-7}$			
Directives	2006/42/EC - 2014/30/EC - 2014/35/EC			
Standards	CEI-EN 61496-1: 2014 - CEI-EN 61496-2: 2014			




DIAGNOSTICS

BOX 2/4 - BOX 2/4 IP66

FUSE 0,5 A	LEDs STATUS	SITUATION	SOLUTION
	ALERT = OFF	Light curtain in alarm state or disconnected	No obnovnostitu
	ALARM = ON		
O M FDT	BLOCK = OFF		
• ALERT • ALARM	BLOCK = OFF		
ALAIM	ALERT = ON		No abnormality
BLOCK BLOCK	ALARM = OFF	Light curtain in alert state	
	BLOCK = OFF		
	BLOCK = OFF		
	ALERT = OFF	Disparity of the input signals, check the outputs of the light curtain. They must open / close at the same time	Resolve the anomaly and then remove the power supply for at least 2 seconds
	ALARM = ON		
BOX 2/4	BLOCK = ON		
	BLOCK = ON		

Any other state is considered an internal error. Call Service NEFTIM


STATE DIAGRAM

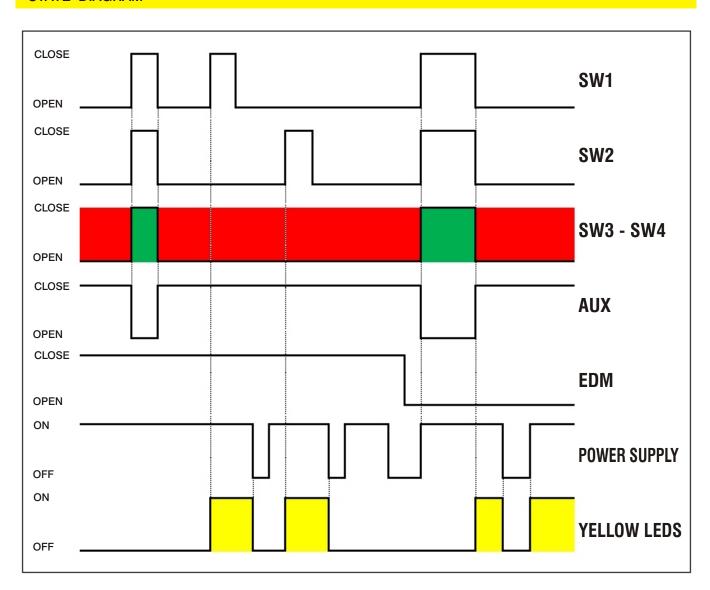



WIRING DIAGRAM


BOX 2/4 - BOX 2/4 IP66

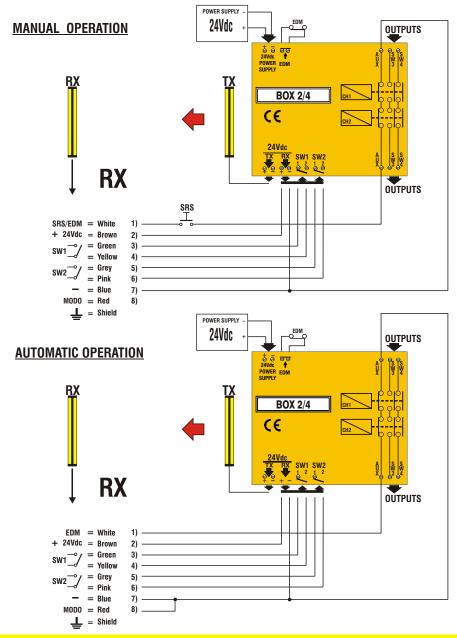


N.B. The unit "BOX 2/4" is provided with the function EDM temporarily excluded (jumper on terminal EDM).

When you had to use other external devices (relays, etc ...) to increase the output contacts, you may want to control the safety of these devices eliminate the bridge in the EDM terminal and connect the contact / contacts NC of such devices in series in the clamp EDM.

MECHANICAL DIMENSIONS (millimeters)

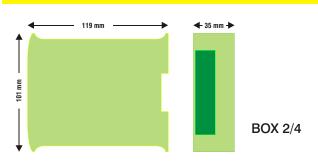

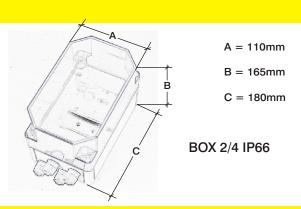

HOW TO ORDER

Product Code BOX 2/4 BOX 2/4 IP66